



CX-DA400

Door Monitor Alarm

USER GUIDE

1. ENABLE ALARM CONDITION

To enable the alarm when the door is opened turn the key to the 12 O'clock position. The LED will be green initially and turn to red meaning it is enabled and armed. Opening the door will create an alarm and the LED will start to flash red and the sounder will activate.

2. DISABLE ALARM CONDITION

To disable the alarm when the door is opened turn the key to the 3 O'clock position. The LED will be green meaning it is disabled and disarmed. Opening the door will not create an alarm.


3. RESETTING AND SILENCING AN ALARM CONDITION

When an alarm has been created and needs to be reset turn the key to the 3 O'clock position and then back to the 12 O'clock position. This will reset the alarm and set it to the armed state for the next alarm to occur. It can also be reset by using the remote bypass input if being used.

4. TEMPORARILY DISABLING ALARM CONDITION

Turn the key to the 3 O'clock position for the desired amount of time needed to temporarily bypass all alarms. Then return the key position to the 12 O'clock position for normal operation.

Note: The key can be taken out or left in the desired position without affecting the operation.

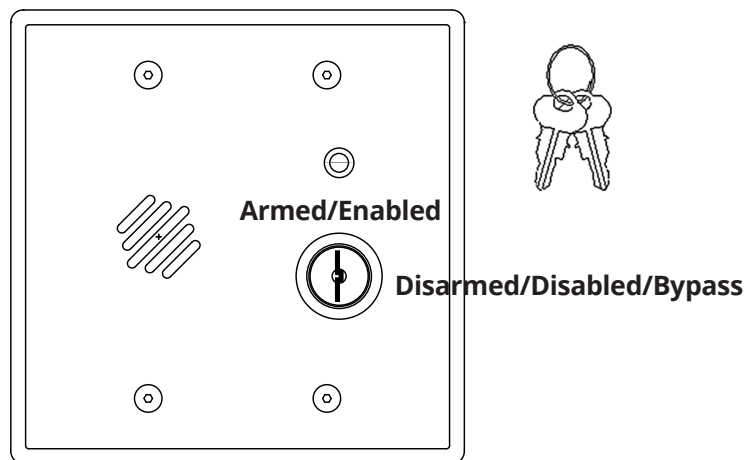

-TO BE LEFT WITH THE END USER-