



The CM-49 may be ordered as a Complete Kit, or as individual components.


Parts included in Complete Kit:

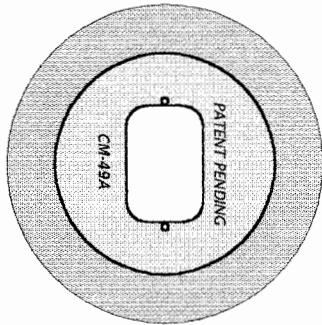


CM-49A
Main Assembly

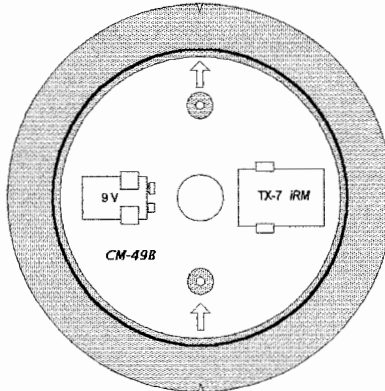

CM-49B
Base Assembly

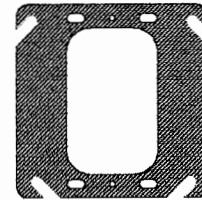


CM-49C
Adapter Ring

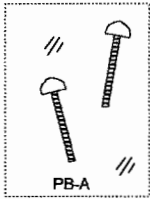


Parts Kit A



Parts Kit B

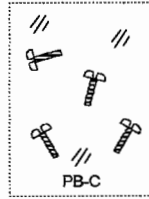

Parts Kit C

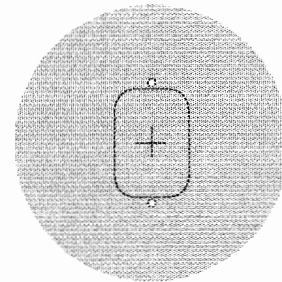

CM-49G
Gasket

Mounting Configurations:

The CM-49 Complete Kit enables a 4 1/2" round switch to be installed in any in-wall electrical box, or to be surface mounted. The chart below show the possible mounting configurations and components required. Refer to diagram above for parts identification.

COMPONENTS > MOUNTING	MAIN CM-49A	BASE CM-49B	ADAPTER CM-49C	GASKET CM-49G	PARTS KITS		
					A	B	C
1. Surface Mount to a solid / hollow Wall (no Box)	✓	✓	Not required	Optional	✓	✓	
2. Mount to a single-gang in-wall electrical box	✓	Not required	Not required	Optional	✓		
3. Mount to a double-gang in-wall electrical box	✓	Not required	✓	Optional	✓		✓
4. Mount to a '4 x 4' in-wall electrical box	✓	Not required	✓	Optional	✓		✓
5. Mount to Glass	Not recommended due to safety issues						
6. Mount to a surface box	Not recommended due to incompatibility						
7. Mount to a "Wallgrabber"	Not recommended due to insufficient strength						

Installation Instructions

Surface Mount (Configuration #1)

1. Locate the 4 pilot holes in the base assembly (CM-49B). They are not drilled all the way through so that you may drill your own holes to match existing layout or, site conditions. Drill 4 x 5/32" (minimum) holes through base.
2. Mark an "X" on the wall at the desired mounting height. Using a level, draw a vertical pencil line at least 5" above and below your "X".
3. Hold the base assembly on the wall with the "X" visible through the centre hole, and the arrows pointing up. Line up the top & bottom leveling notches with the vertical pencil line. Mark the drilling locations with a pencil or centerpunch.
4. Remove the base assembly and drill holes in wall. Insert the appropriate wall fasteners.
5. If you wish to use the supplied weather gasket, remove the backing paper, and attach to rear of CM-49B. If hardwiring the CM-49 you will notice a perforated slot opening in the centre of the gasket to accommodate wiring. Alternatively, a channel in the perimeter allows a bead of caulking for mounting to rough surfaces.
6. Fasten the base assembly to the wall with supplied screws.
7. If using Radio controls, we have molded-in compartments to hold the transmitter and battery securely. Install transmitter, battery and pull switch wiring out full length.
8. Line up part A over part B, and partially screw in the two #6-32 Allen-head screws included in kit. (Do not use the short screws provided with your switch.)
9. Place your 4 1/2" switch over the two screws, install wiring connectors to switch, and centre in the opening.
10. Tighten the screws firmly using the Allen key provided with switch.


Mounting to a Single-gang in-wall box (Configuration #2)

1. If you wish to use the supplied weather gasket, punch out the centre perforated section first. Remove the backing paper, ensure the two 1/4" holes line up, and affix to the back of CM-49A. Alternatively, a channel in the perimeter allows caulking to rough surfaces.
2. Place the CM-49A over the electrical box, and screw in the two #6-32 Allen-head screws (included in kit) by a few threads only. (Do not use the short screws provided with switch.)
3. Place your 4 1/2" switch over the two screws, install wiring connectors to switch, and centre in the opening.
4. Tighten the screws firmly using the Allen key provided with switch.

Mounting to 2-Gang or 4 x 4 in-wall boxes (Configurations #3 & 4)

1. If you wish to use the supplied weather gasket, punch out the centre perforated section first. Remove the backing paper, ensure the two 1/4" holes line up, and affix to the back of CM-49A. Alternatively, a channel in the perimeter allows caulking to rough surfaces.
 - 2a. Double-gang Electrical box. Using the screws provided in Parts Bag 'C', screw the CM-49C adapter plate to electrical box. (Screws provided with switch are too short).
 - 2b. '4 x 4' Electrical box. Using the two #8-32 screws provided with electrical box, fasten CM-49C Adapter plate securely.
3. Place CM-49A over adapter plate, and screw the two supplied #6-32 Allen-head screws in by a few threads only.
4. Place your 4 1/2" switch over the two screws, install wiring connectors to switch, and centre in the opening.
5. Tighten the screws firmly using the Allen key provided with switch.

Filename: CM-49 Instructions.doc Revision: March 4, 2003

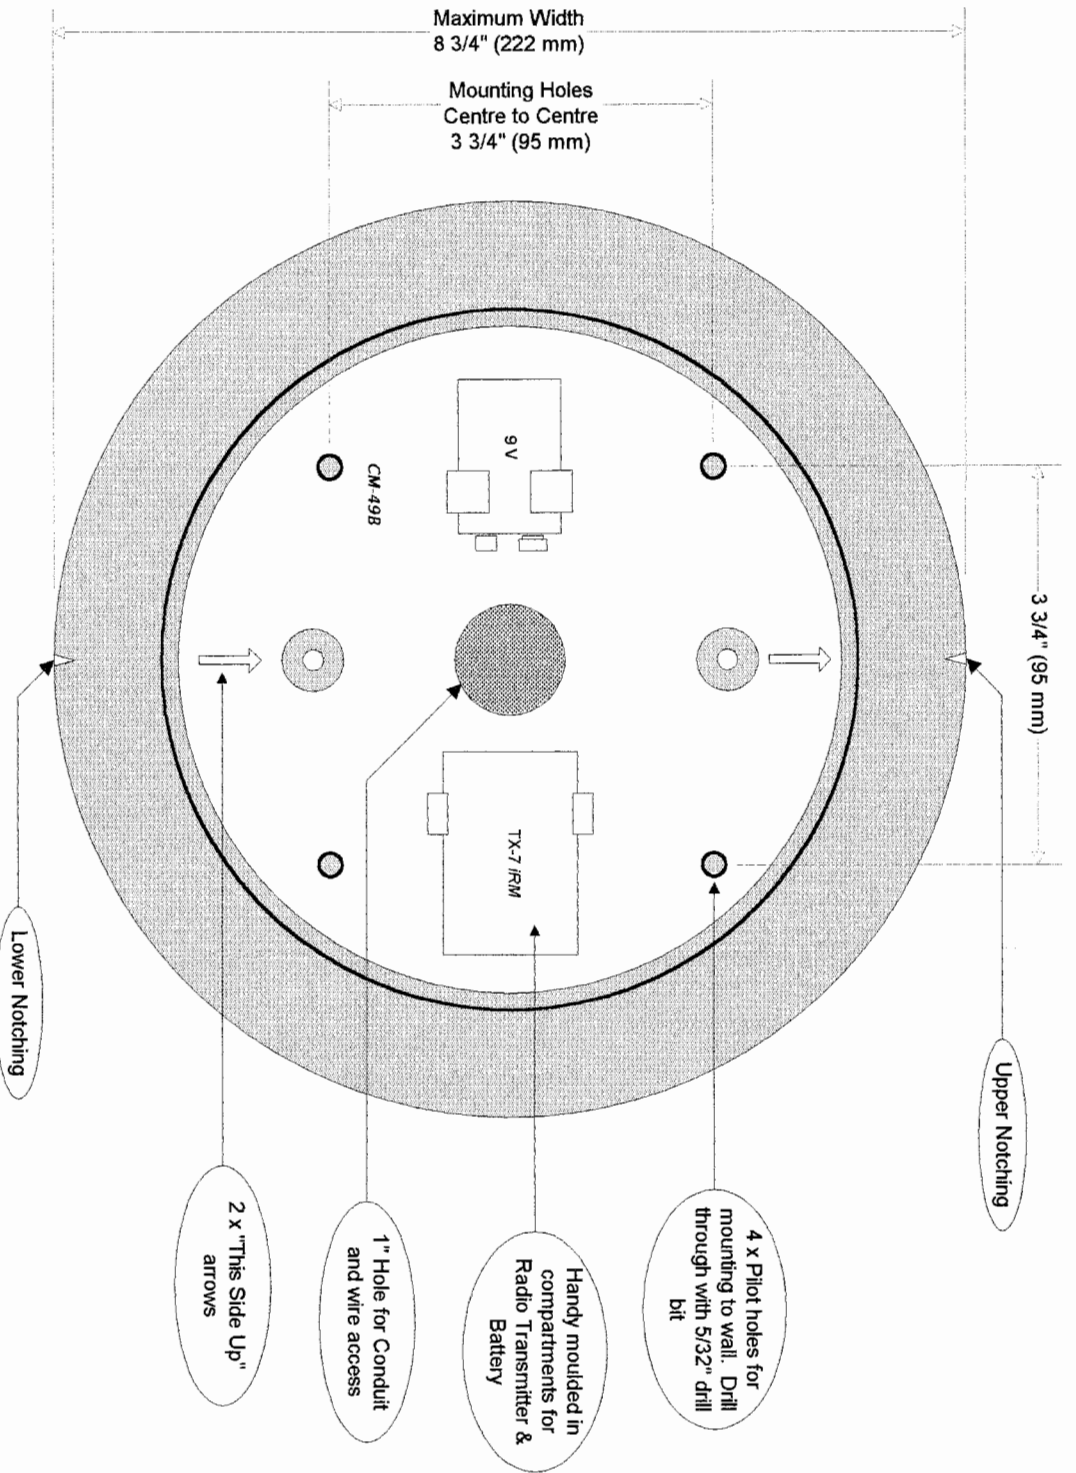

Camden Door Controls

5151 Everest DR, Unit 6
Mississauga, Ontario
L4W 2Z3

SCALE: None	DRAWN BY: DGW	DATE: 03/19/01	REVISED: 03/04/03
-------------	---------------	----------------	-------------------

Camden CM-49B Base Assembly Detail

DRAWING No: DRG-CM-49b Detail	FILENAME: CM49B Detail.vsd
-------------------------------	----------------------------