



LAZERPOINT RF™ BY CAMDEN

915 MHz. Battery Powered Wireless Door Control System



Lazerpoint RF™ introduces the many advantages of 915 MHz. spread spectrum wireless technology to the automatic door market!

Our 'PUSH AND LEARN' transmitter enrollment and signal strength indicators, make Lazerpoint RF™ the easiest system to install.

This system encompasses the widest range of transmitters, receivers, activation devices and switch enclosures.

Lazerpoint RF™ available in complete packages for your automatic door switch installation - all at an economical price!

Features

- Advanced 915MHz spread spectrum (broadband) wireless communications.
- Multi-year battery life ('AAA' alkaline or lithium) and low battery, gas gauge & stuck switch audible alerts.
- CM-RX-90 advanced receiver, with 1 relay, 3 operating modes (delay, non-delay & latching). Ideal for vestibule applications.
- RX-92 receiver with 2 channels and 6 operating modes; saves time and avoids buying and installing additional components.
- Ultra compact receivers can be mounted in door operator cabinets.
- Compact ADA compliant 1, 2 and 4 button key FOBs.
- Innovative FOB base for wheelchair, visor, belt or wall mounting.
- Plug-in Lazerpoint RF™ wireless transmitter module for CM-120 digital keypads and CM-330 hands-free.



SPECIFICATIONS

WIRELESS FREQUENCY: 905.25 / 915.25 / 925.25 MHz. Spread Spectrum

WIRELESS RANGE: **CM-TX-9/99:** 500ft (152m) open area
CM-TXLF Series: 250ft (76m) open area

RECEIVER CAPACITY: 40 CM-TX Series Transmitters

CODES: 1 Million Unique (20 Bit) Codes

POWER / VOLTAGE: **CM-RX-90/91/92:** 12/24V AC/DC
CM-TX-9: (2) AAA alkaline batteries (supplied)
 (2) AAA lithium batteries (option)
CM-TX99: Plug-in, power by device
CM-TXLF Series: CR2032 Lithium battery

BATTERY LIFE: **CM-TX-9:** 500,000 cycles **CM-TXLF:** 115,000 cycles

CONTACT RATING: 3A @ 30 VDC

STATUS & ALARM INDICATORS:
CM-TX-9/TXLF: Transmission confirmation,
 low battery, battery test and stuck switch
CM-RX-90/91/92: Relay status, signal strength,
 erase mode and pot position

TEMPERATURE RANGE: Alkaline: 32°F to 122°F (0°C to 80°C)
 Lithium: -40°F to 122°F (-40°C to 50°C)

OUTPUT: **CM-RX-90:** (1) SPDT relay, 3 modes
CM-RX-91: (1) SPDT relay, 1 modes
CM-RX-92: (2) SPDT relays, 6 modes

CURRENT DRAW: **CM-TX-9:** 2mA
CM-RX-90: 23mA - 43mA
CM-RX-91/92: 23mA - 63mA

TIME DELAY: **CM-RX-90/91:** 1-30 seconds
CM-RX-92:
 #1 D.O.R. 1-30 sec. | #2 D.O.O. 1-15 sec. | #2 D.O.R. 1-30 sec.

RECEIVER & FOB DIMENSIONS:
CM-RX-90: 3-1/2"H x 1-1/2"W x 13/16"D (89mm x 38mm x 21mm)
CM-RX-91/92: 4-1/2"H x 2"W x 1"D (114mm x 50mm x 25mm)
CM-TX-9: 2-1/4"H x 5/8"W x 3/8"D (57mm x 16mm x 10mm)
CM-TXLF: 2-9/16"H x 1-9/16"W x 5/8"D (65mm x 40mm x 16mm)
CM-TXLF-B: 4"H x 1-5/8"W x 3/4"D (102mm x 42mm x 19mm)
CM-TX99: 1-9/16"H x 9/16"W x 5/16"D (40mm x 15mm x 8mm)

ORDERING INFORMATION:

RF WIRELESS TRANSMITTERS

ADA COMPLIANT KEY FOBBS



CM-TXLF-1
One - button
key fob



CM-TXLF-2
Two - button
key fob



CM-TXLF-4
Four - button
key fob



CM-TXLF-1LP
One - button
key fob




CM-TXLF-2LP
Two - button
key fob

KEY FOB BASE



CM-TXLF-B
Base for any TXLF fob, wall or
desk mountable. Belt / visor clip
and wheelchair strap included

WALL SWITCH TRANSMITTER

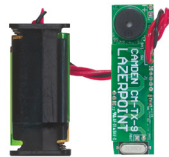

CM-TX-9
Wall Switch Transmitter

LITHIUM BATTERIES

CM-xxx-L2
Add 'L2' to CM-TX-9 model # for 'AAA'
lithium batteries in place of alkaline

CM-LP2
(2) 'AAA' lithium battery packs

LAZERPOINT RF™ WIRELESS RECEIVERS



CM-RX-DBK
Kinetic™ plug-in
no-battery wireless
daughterboards for
CM-RX-91 or CM-RX-92
V2 receivers



CM-RX-90
V2 Lazerpoint RF™
and Kinetic™
Compatible Single
Relay Receiver



CM-RX-91
V2 Lazerpoint RF™
dual frequency receiver,
slot for (1) Kinetic™
plug-in no-battery
wireless daughterboard



CM-RX-92
V2 Lazerpoint RF™
dual frequency receiver,
slot for (2) Kinetic™
plug-in no-battery
wireless daughterboards

CM-RX-91-DBK1
V2 Lazerpoint RF™ dual frequency
receiver with Kinetic™ plug-in
no-battery wireless daughterboard

CM-RX-92-DBK1
V2 Lazerpoint RF™ dual frequency
receiver with (1) Kinetic™ plug-in
no-battery wireless daughterboards

CM-RX-92-DBK2
V2 Lazerpoint RF™ dual frequency
receiver with (2) Kinetic™ plug-in
no-battery wireless daughterboards



LAZERPOINT RF™ 915 MHZ. WIRELESS SWITCH KITS



Lazerpoint RF™ wireless is available in complete packages with everything for your automatic door switch installation. Kits include a choice of stainless steel/aluminum All-Active push plate switches, rugged surface or flush mount boxes/enclosures, (2) RF switch transmitters and (1) receiver - all at an economical price.

LAZERPOINT RF™ SWITCH OPTIONS INCLUDE : RX-90 Advanced 1 relay receiver (other receiver options on page 2), vestibule switches, water tight and architectural finishes and / or French language options.

Lithium batteries recommended for environments below -32°F (0°C).

CM-25 JAMB WIDTH PUSH PLATE	CM-26CB BLUE JAMB WIDTH
<p>CM-RFL252-A (2) CM-25/2 WHEELCHAIR, (2) CM-23D Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL253-A (2) CM-25/3 'PUSH TO OPEN', (2) CM-23D Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL253F-A (2) CM-25/3F 'POUSSEZ POUR OUVRIR', (2) CM-23D Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL254-A (2) CM-25/4 WHEELCHAIR & 'PUSH TO OPEN', (2) CM-23D Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL254F-A (2) CM-25/4F WHEELCHAIR & 'POUSSEZ POUR OUVRIR', (2) CM-23D Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL25A4-A (2) CM-25/A4 Active WHEELCHAIR & 'PUSH TO OPEN', (2) CM-23D Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p>	<p>CM-RFL26CB2-A (2) CM-26CB/2 WHEELCHAIR symbol, (2) CM-23D Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL26CB4-A (2) CM-26CB/4 WHEELCHAIR & 'PUSH TO OPEN', (2) CM-23D Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p>
 CM-25 Series	 CM-26CB Series
CM-35 SINGLE GANG PUSH PLATE	
<p>CM-RFL352-A (2) CM-35/2 WHEELCHAIR symbol, (2) CM-34BL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL353-A (2) CM-35/3 'PUSH TO OPEN' text, (2) CM-34BL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL353F-A (2) CM-35/3 'POUSSEZ POUR OUVRIR' text, (2) CM-34BL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL354-A (2) CM-35/4 'PUSH TO OPEN' text, (2) CM-34BL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL354F-A (2) CM-35/4 'POUSSEZ POUR OUVRIR' text, (2) CM-34BL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p>	 CM-35 Series
CM-40 4-1/2" ROUND PUSH PLATE	
<p>CM-RFL402-47-A (2) CM-40/2 WHEELCHAIR symbol, (2) CM-47S Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL403-47-A (2) CM-40/3 PUSH TO OPEN, (2) CM-47S Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL403F-47-A (2) CM-40/3 'POUSSEZ POUR OUVRIR', (2) CM-47S Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL404-47-A (2) CM-40/4 WHEELCHAIR & 'PUSH TO OPEN', (2) CM-47S Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL404F-47-A (2) CM-40/4F WHEELCHAIR & 'POUSSEZ POUR OUVRIR', (2) CM-47S Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL402-49-A (2) CM-40/2 WHEELCHAIR symbol, (2) CM-49 Flush/Surface enclosures, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL403-49-A (2) CM-40/3 PUSH TO OPEN, (2) CM-49 Flush/Surface enclosures, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL403F-49-A (2) CM-40/3F 'POUSSEZ POUR OUVRIR', (2) CM-49 Flush/Surface enclosures, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL404-49-A (2) CM-40/4 WHEELCHAIR & 'PUSH TO OPEN', (2) CM-49 Flush/Surface enclosures, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p> <p>CM-RFL404F-49-A (2) CM-40/4F WHEELCHAIR & 'POUSSEZ POUR OUVRIR', (2) CM-49 Flush/Surface enclosures, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver</p>	 CM-40 Series  CM-47S  CM-49



CM-45 4-1/2" SQUARE (CONCEALED SCREWS) PUSH PLATE

CM-RFL452-SA

(2) CM-45/2 WHEELCHAIR symbol, (2) CM-43CBL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL453-SA

(2) CM-45/3 'PUSH TO OPEN', (2) CM-43CBL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL453F-SA

(2) CM-45/3F 'POUSSEZ POUR OUVRIR', (2) CM-43CBL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL454-SA

(2) CM-45/4 WHEELCHAIR & 'PUSH TO OPEN', (2) CM-43CB Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL454F-SA

(2) CM-45/4F WHEELCHAIR & 'POUSSEZ POUR OUVRIR', (2) CM-43CB Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL45A4-SA

(2) CM-45/A4 Active WHEELCHAIR & 'PUSH TO OPEN', (2) CM-43CB Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL452-LPA

(2) CM-45/2 WHEELCHAIR symbol, (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL453-LPA

(2) CM-45/3 'PUSH TO OPEN', (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL453F-LPA

(2) CM-45/3F 'POUSSEZ POUR OUVRIR', (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL454-LPA

(2) CM-45/4 WHEELCHAIR & 'PUSH TO OPEN', (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL454F-LPA

(2) CM-45/4F WHEELCHAIR & 'POUSSEZ POUR OUVRIR', (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver



CM-45 Series



CM-43CBL



CM-43LP

CM-46CB 4-1/2" SQUARE (EXPOSED SCREWS) PUSH PLATE

CM-RFL462-SA

(2) CM-46/2 WHEELCHAIR symbol, (2) CM-43CBL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL463-SA

(2) CM-46/3 'PUSH TO OPEN', (2) CM-43CBL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL463F-SA

(2) CM-46/3F 'POUSSEZ POUR OUVRIR', (2) CM-43CBL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL464-SA

(2) CM-46/4 WHEELCHAIR & 'PUSH TO OPEN', (2) CM-43CBL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL464F-SA

(2) CM-46/4F WHEELCHAIR & 'POUSSEZ POUR OUVRIR', (2) CM-43CBL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL462-LPA

(2) CM-46/2 WHEELCHAIR symbol, (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL463-LPA

(2) CM-46/3 'PUSH TO OPEN', (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL463F-LPA

(2) CM-46/3F 'POUSSEZ POUR OUVRIR', (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL464-LPA

(2) CM-46/4 WHEELCHAIR & 'PUSH TO OPEN', (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL464F-LPA

(2) CM-46/4F WHEELCHAIR & 'POUSSEZ POUR OUVRIR', (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver



CM-46 Series



CM-43CBL



CM-43LP



CM-46 BLUE 4-1/2" SQUARE (EXPOSED SCREWS) PUSH PLATE

CM-RFL46CB2-SA

(2) CM-46CB/2 WHEELCHAIR symbol, (2) CM-43CBL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL46CB3-SA

(2) CM-46CB/3 'PUSH TO OPEN', (2) CM-43CBL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL46CB3F-SA

(2) CM-46CB/3F 'POUSSEZ POUR OUVRIR', (2) CM-43CBL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL46CB4-SA

(2) CM-46CB/4 WHEELCHAIR & 'PUSH TO OPEN', (2) CM-43CBL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL46CB4F-SA

(2) CM-46CB/4F WHEELCHAIR & 'POUSSEZ POUR OUVRIR', (2) CM-43CBL Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL46CB2-LPA

(2) CM-46CB/2 WHEELCHAIR symbol, (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL46CB3-LPA

(2) CM-46CB/3 'PUSH TO OPEN', (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL46CB3F-LPA

(2) CM-46CB/3F 'POUSSEZ POUR OUVRIR', (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL46CB4-LPA

(2) CM-46CB/4 WHEELCHAIR & 'PUSH TO OPEN', (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL46CB4F-LPA

(2) CM-46CB/4F WHEELCHAIR & 'POUSSEZ POUR OUVRIR', (2) CM-43LP Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver



CM-46CB Series



CM-43CBL



CM-43LP

CM-60 6" ROUND PUSH PLATE

CM-RFL602-69-A

(2) CM-60/2 WHEELCHAIR symbol, (2) CM-69S Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL603-69-A

(2) CM-60/3 'PUSH TO OPEN', (2) CM-69S Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL603F-69-A

(2) CM-60/3F 'POUSSEZ POUR OUVRIR', (2) CM-69S Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL604-69-A

(2) CM-60/4 WHEELCHAIR & 'PUSH TO OPEN', (2) CM-69S Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL604F-69-A

(2) CM-60/4F WHEELCHAIR & 'POUSSEZ POUR OUVRIR', (2) CM-69S Surface Boxes, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL602-79-A

(2) CM-60/2 WHEELCHAIR symbol, (2) CM-79A/B Flush/Surface Enclosures, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL603-79-A

(2) CM-60/3 'PUSH TO OPEN', (2) CM-79A/B Flush/Surface Enclosures, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL603F-79-A

(2) CM-60/3F 'POUSSEZ POUR OUVRIR', (2) CM-79A/B Flush/Surface Enclosures, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL604-79-A

(2) CM-60/4 WHEELCHAIR & 'PUSH TO OPEN', (2) CM-79A/B Flush/Surface Enclosures, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver

CM-RFL604F-79-A

(2) CM-60/4F WHEELCHAIR & 'POUSSEZ POUR OUVRIR', (2) CM-79A/B Flush/Surface Enclosures, (2) CM-TX-9 Transmitters, (1) CM-RX-90 Receiver



CM-60 Series



CM-69S



CM-79



CM-2520 VESTIBULE SWITCH PACKAGE

CM-RFL25202-SD

(1) CM-2520/2 WHEELCHAIR symbol, (1) CM-53 Surface Box, (2) CM-TX-9 Transmitters, (1) CM-RX-92 Dual Relay Receiver

CM-RFL25203-SD

(1) CM-2520/3 'PUSH TO OPEN', (1) CM-53 Surface Box, (2) CM-TX-9 Transmitters, (1) CM-RX-92 Dual Relay Receiver

CM-RFL25203F-SD

(1) CM-2520/3F 'POUSSEZ POUR OUVRIR', (1) CM-53 Surface Box, (2) CM-TX-9 Transmitters, (1) CM-RX-92 Dual Relay Receiver

CM-RFL25204-SD

(1) CM-2520/4 WHEELCHAIR symbol & 'PUSH TO OPEN', (1) CM-53 Surface Box, (2) CM-TX-9 Transmitters, (1) CM-RX-92 Dual Relay Receiver

CM-RFL25204F-SD

(1) CM-2520/4F WHEELCHAIR & 'POUSSEZ POUR OUVRIR', (1) CM-53 Surface Box, (2) CM-TX-9 Transmitters, (1) CM-RX-92 Dual Relay Receiver

CM-RFL25202-LPD

(1) CM-2520/2 WHEELCHAIR symbol, (1) CM-43LPB Surface Box, (2) CM-TX-9 Transmitters, (1) CM-RX-92 Dual Relay Receiver

CM-RFL25203-LPD

(1) CM-2520/3 'PUSH TO OPEN', (1) CM-43LPB Surface Box, (2) CM-TX-9 Transmitters, (1) CM-RX-92 Dual Relay Receiver

CM-RFL25203F-LPD

(1) CM-2520/3F 'POUSSEZ POUR OUVRIR', (1) CM-43LPB Surface Box, (2) CM-TX-9 Transmitters, (1) CM-RX-92 Dual Relay Receiver

CM-RFL25204-LPD

(1) CM-2520/4 WHEELCHAIR symbol & 'PUSH TO OPEN', (1) CM-43LPB Surface Box, (2) CM-TX-9 Transmitters, (1) CM-RX-92 Dual Relay Receiver

CM-RFL25204F-LPD

(1) CM-2520/4F WHEELCHAIR & 'POUSSEZ POUR OUVRIR', (1) CM-43LPB Surface Box, (2) CM-TX-9 Transmitters, (1) CM-RX-92 Dual Relay Receiver



CM-2520



CM-43LPB



CM-53

SWITCH KIT OPTIONS

WIRELESS RECEIVER



B

Replace "A" suffix in kit model number with "B" suffix to order RX-91 receiver in place of RX-90 receiver



D

Replace "A" suffix in kit model number with "D" suffix to order RX-92 receiver in place of RX-90 receiver

ARCHITECTURAL FINISHES



-AB

Add 'AB' to product # for (2) antique brass finish (US5 / 609)



-SB

Add 'SB' to product # for (2) satin brass finish (US4 / 606)



-OB

Add 'OB' to product # for (2) oil rub bronze finish (US10B / 613)



-PB

Add 'PB' to product # for (2) polished brass finish (US3 / 605)

WATER TIGHT

WT

Add suffix to any RFL kit (2) 'WT' water tight

LITHIUM BATTERIES

L3

Add suffix 'L3' for (4) 'AAA' Lithium Batteries

VESTIBULE SWITCH

-V

Replace "-V" to add CM-RFL2520 kit, with CM-43CBLA surface box. Add suffix for (1) CM-RX-90 or (1) CM-RX-92

-LV

Add '-LPV' to add CM-RFL2520 kit, with CM-43LPB shallow box. Add suffix for (1) CM-RX-90 or (1) CM-RX-92



CM-XXX-V